

Flush Membrane Transmitter



Warning: Before installation, commissioning, and operation, ensure that the pressure transmitter is suitable for the application in terms of measuring range, design and environmental conditions. Non-observance can result in serious injury and/or damage to equipment.

Intended use: This instrument converts pressure into an electrical signal.

The instrument has been designed and built solely for the intended use described here and may only be used accordingly. If the equipment is used in a different manner, the protection provided by the equipment may be impaired and Trafag shall not be liable for any claims at all.


Datasheets

FPT 8236







www.trafag.com/H72343

 Type label description (Example)

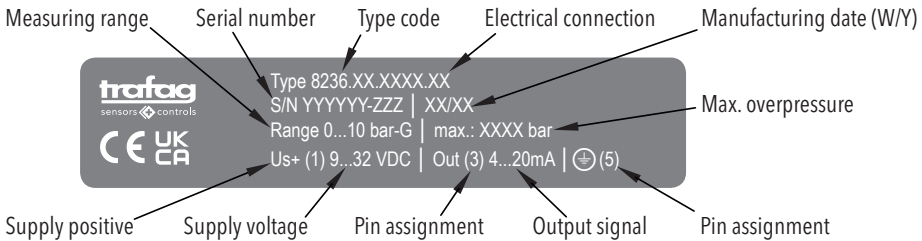

Electrical connections

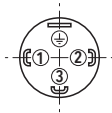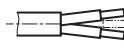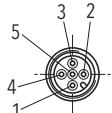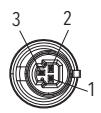
Designation	EN175301-803A (DIN43650-A)	Cable (PVC) (PUR) 4 x 0.25mm ²	M12x1 5-pol.	Packard Metri Pack 3-pol.
Type code	8236.XX.XXXX.05	8236.XX.XXXX.08/22/24	8236.XX.XXXX.35	8236.XX.XXXX.51
Pin configuration				

Output	Load resistance	I _{SUPPLY}	U _{SUPPLY}
4 ... 20 mA	(U _{Supply} -9V)/ 20mA		9... 32 VDC
0 ... 5 VDC	> 2.5 kΩ	< 10 mA	9... 32 VDC
1 ... 6 VDC	> 5.0 kΩ	< 10 mA	9... 32 VDC
0 ... 10 VDC	> 5.0 kΩ	< 10 mA	15... 32 VDC
0.5...4.5 VDC ratiom.	≥ 5.0 kΩ	≤ 10 mA	5 (4.75 ... 5.25) VDC


www.trafag.com

Connection of the measuring equipment

 Current output 2-wires

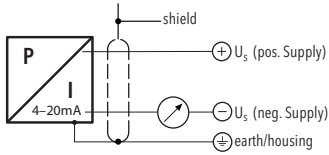


Voltage output 3-wires

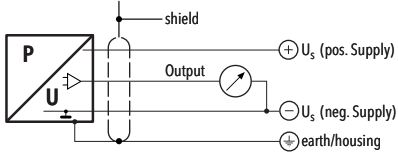 

Pressure connection

 Mounting thread G1/2"
DIN EN ISO 1179-1

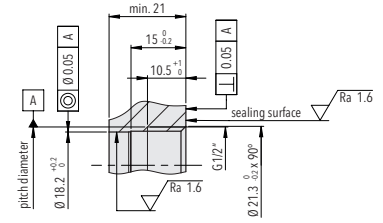

Adjustment of connector EN 175301-803 A

! Only versions without Loctite securing of housing nut

